

# LON door installation modules




## LT2


door installation module, 24 V AC/DC

**Part number**  
110 396 13

### Dimensions - housing E19

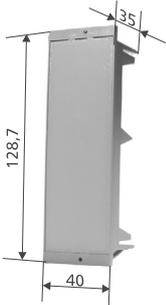

### Wiring

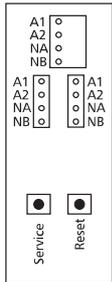

### Use

Tact switch and indicator module for 19" frames. Suited as manual operation level in electrical cabinet doors or remote control panels to operate motor powered fire shutters. The LT2 allows to conduct test runs or to commute to the inverted state of the shutter.

The module indicates the status fire alarm, shutter position and pollution. The module is designed for 5 units and is provided with an integrated communication control.

### Functional description

In a LON installation the different LEDs and the four tact switches are activated and/or analysed by the network variables SNVT.

### LON interface

|                          |                                   |
|--------------------------|-----------------------------------|
| transceiver              | FTT10A free topology              |
| neuron                   | 3120, 4k EEPROM                   |
| data format              | standard network variables (SNVT) |
| transmission rate        | 78 kBit/s                         |
| max. length (see page 7) |                                   |
| line topology            | 2700 m / 64 nodes                 |
| free topology            | 500 m / 64 nodes                  |
| cabling                  | twisted pair                      |

### Application software

XIF and NXE files are available as downloads under [www.btr-electronic-systems.de](http://www.btr-electronic-systems.de).

### Technische Daten

#### Housing

|                                |  |
|--------------------------------|--|
| dimensions b x h x w           | 40 x 128.7 x 35 mm (3HE; 8 TE)   |
| weight                         | 66 g   |
| mounting position              | any  |
| mounting                       | in 10" or 19" frames according to IEC 297-3 (accessories page 88 P/N 110361 or 110362) |
| material                       | housing ABS  |
| type of protection (DIN 40050) | IP20   |

#### Terminal blocks

|                |   |
|----------------|---|
| supply and bus | 1.5 mm <sup>2</sup> pluggable jumper plug (included to packing) |
|----------------|---|

#### Supply

|                         |                          |
|-------------------------|--------------------------|
| operating voltage range | 20 ... 28 V AC/DC        |
| current consumption     | 90 mA (AC)<br>38 mA (DC) |
| duty cycle              | 100 %                    |
| recovery time           | 500 ms                   |

#### Temperature range

|           |                   |
|-----------|-------------------|
| operation | -5 °C ... +55 °C  |
| storage   | -20 °C ... +70 °C |

#### Protective circuitry

|                   |                              |
|-------------------|------------------------------|
| operating voltage | polarity reversal protection |
|-------------------|------------------------------|

#### Display


|        |                                  |
|--------|----------------------------------|
| 4 LEDs | adjustable to red, green, yellow |
|--------|----------------------------------|

If a LED is adjusted to yellow for acknowledgment (17,0 0) the system will identify this as a maintenance signal and interpret it accordingly at the LM1 module (annunciator module for message collection). If a LED is adjusted to flash red, to acknowledge and to unlock (52,5 0) this is identified as a failure message and interpreted accordingly at the LM1 module.

# LON door installation module

## Description of the LonMark objects and network variables

LT2

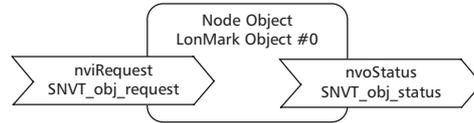


### Node Object

The Node Object monitors and controls the functions of the different objects in the device. It supports the basic functions Object Status and Object Request required by LonMark.

### Application Objects

The objects contain the functions tact switch analysis and status visualization.

### LED Object

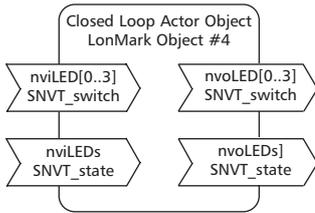

### LED Object

#### nviLED[0..3] (Index 2 .. 5)

SNVT Type

SNVT\_switch

Function

switching of the LEDs

nviLED[0..3] = 0.0 0

the LEDs adopt the status defined by nciLEDaus[0..3].

nviLED[0..3] = 100.0 1

the LEDs adopt the status defined by nciLEDan[0..3].

#### nvoLED[0..3] (Index 6 .. 9)

SNVT Type

SNVT\_switch

Function

feedback to nviLED[0..3]

value of nviLED[0..3] is transmitted.

#### nviLEDs (index 10)

SNVT Type

SNVT\_state

Function

switching of the LEDs

#### nvoLEDs (index 11)

SNVT Type

SNVT\_state


Function

feedback to nviLEDs

Assignment

nvoLEDs.bit0 = LED1 ... nvoLEDs.bit3 = LED 4

### Taster Object

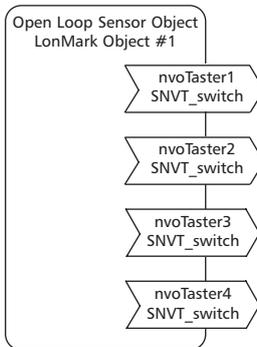

### Taster Object


#### nvoTaster[1..4] (Index 12 .. 15)

SNVT Type

SNVT\_switch

nvoTaster[1..4] is 0.0 0 and changes to 100.0 1 when the tact switch is pressed.

### Extern Object

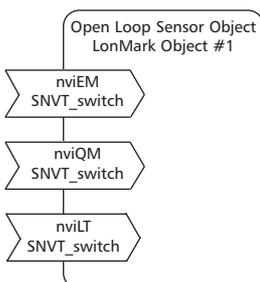

### Extern Object (external Signals)

#### nviEM (Index 16) (unlock signal)

SNVT Type

SNVT\_switch

Function

If nviEM gets the value 100.0 1, the LT1 is unlocked and nvoBTR.bit13 is set.

#### nviQM (Index 17) (acknowledgement signal)

SNVT Type

SNVT\_switch

Function

If nviQM gets the value 100.0 1, the LT2 acknowledged and nvoBTR.bit14 is set..

#### nviLT (Index 18) (lamp test)

SNVT Type

SNVT\_switch

Function


If nviLT gets the value 100.0 1, a lamp test is carried out at the LT2 and nvoBTR.bit15 is set.

# LON door installation module


## Description of the LonMark objects and network variables

LT2

### BTR Object

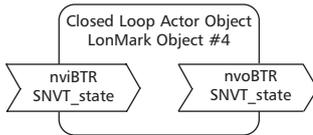

### Configuration variables

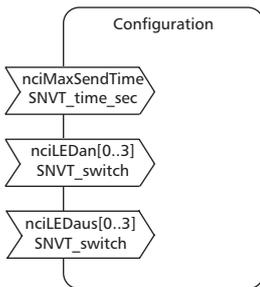

### BTR Object

#### nviBTR (Index 19)

SNVT Type

Function

Bit0 .. Bit8

Bit9

Bit10

Bit11

Bit12

Bit13

Bit14

Bit15

SNVT\_state

System object for Logline LON door installation modules to provide simple connection to the annunciator module for signal collection LM1.

not used

automatic operation in the system = 1; manual operation in the system = 0

new failure signal in the system = 1; no or acknowledged failure in the system = 0

new failure signal in the system = 1; no or unlocked failure in the system = 0

maintenance signal in the system = 1; no or acknowledged maintenance in the system = 0

unlocking signal of the LM1, is set to 1 by unlocking tact switch

acknowledgement signal of LM1; is set to 1 by the acknowledgement tact switch

request of the LM1 for lamp testing; is set to 1 by the lampt test tact switch

#### nvoBTR (Index 20)

SNVT-Typ

Function

SNVT\_state

Feedback to nviBTR. Value of nviBTR is transmitted.

If a LED that is specified as maintenance signal (yellow LED requiring acknowledgement) is set by nviLED[x], nvoBTR Bit12 changes to 1.

If a LED that is specified as failure signal (flashing red LED requiring acknowledgement and unlocking) is set by nviLED[x], nvoBTR Bit10 and Bit11 change to 1.

### Configuration variables

#### nciMaxSendTime (Index 21)

SNVT Type

Function

Timer settings

SNVT\_time\_sec

All output variables nvo described above are issued even without a status change at the end of a preset period of time. Thus the device reports periodically to the system.

0 timer turned off

1 .. 65000 timer time in seconds (factory setting 0)

#### nciLEDan[0..3] (Index 22 .. 25)

SNVT Type

Function

LED settings

SNVT\_switch

Setting of status and colour of each LED at nviLED[0..3] = 100.0 1.

nciLEDan[0..3].value = a + b + c + d

nciLEDan[0..3].state = 0

#### nciLEDAus[0..3] (Index 26 .. 29)

SNVT Type

Function

LED settings

SNVT\_switch

ESetting of status and colour of each LED at nviLED[0..3] = 0.0 0

see nciLEDan[0..3]

e.g. LED off nciLEDAus[0..3] = 0.0 0